


PicoScope® 2000 Series

2-CHANNEL OSCILLOSCOPES WITH ARBITRARY WAVEFORM GENERATOR

High Quality from a Name You Can Trust

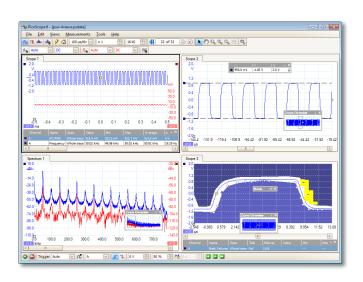

10 MHz to 200 MHz bandwidths
Up to 1 GS/s sampling rate
Advanced digital triggers
Persistence display modes
Mask limit testing
Serial decoding
Fast USB 2.0 interface
USB-powered and portable
Free software upgrades











Supplied with a full Software Development Kit including example programs • Software compatible with Windows XP, Windows Vista and Windows 7 • Free Technical Support

PicoScope for power, portability and versatility



These handy, economical oscilloscopes have all the power you need for your application, whether it's design, research, test, education, service or repair. They are available with bandwidths from 10 MHz to 200 MHz.

PicoScope oscilloscopes are small, light and portable. They easily slip into a laptop bag and so are ideal for the

engineer on the move. They don't need an external power supply, so they are perfect for field use. The connection to your PC means that functions such as printing, copying and email are always at your fingertips.

The first USB-powered 1 GS/s oscilloscopes!

The series includes the first USB-powered oscilloscopes to offer a 1 GS/s real-time sampling rate, previously possible only with mains-powered instruments. Most other USB-powered oscilloscopes are limited to only 100 or 200 MS/s. For repetitive signals, equivalent-time sampling (ETS) mode boosts the maximum effective sampling rate even higher to 10 GS/s, allowing exceptionally fine timing resolution.

Digital triggering

Most digital oscilloscopes sold today still use an analog trigger architecture based on comparators. This can cause time and amplitude errors that cannot always be calibrated out. The use of comparators often limits the trigger sensitivity at high bandwidths and can also create a long trigger re-arm delay.




Since 1991 we have been pioneering the use of fully digital triggering using the actual digitized data. This reduces trigger errors and allows our oscilloscopes to trigger on the smallest signals, even at the full bandwidth. Trigger levels and hysteresis can be set with great precision and resolution.

The reduced re-arm delay provided by digital triggering, together with segmented memory, allows the capture of events that happen in rapid sequence. At the fastest timebase, rapid triggering can capture a new waveform every 2 microseconds until the buffer is full. The mask limit testing feature (see below) helps to detect waveforms that fail to meet your specifications.

Advanced triggers

As well as the standard range of triggers found on all oscilloscopes, the PicoScope 2000 Series offers one of the best selections of advanced triggers available, including pulse width, windowed and dropout triggers to help you find your signal quickly.


Custom probe settings

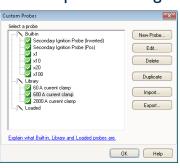

The custom probes feature allows you to correct for gain, attenuation, offsets and nonlinearities in special probes, or to convert to different units of measurement (such as current, power or temperature). You can save definitions to disk for later use. Definitions for standard Pico-supplied oscilloscope probes and current clamps are built in.


Arbitrary waveform and function generator

All units have a built-in function generator with sine, square, triangle, DC level and many more standard waveforms. As well as level, offset and frequency controls, more advanced options allow you to sweep over a range of frequencies. Combined with the spectrum peak hold option, this creates a powerful tool for testing amplifier and filter responses.

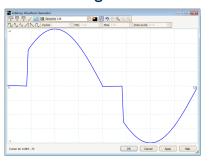

The PicoScope 2000 Series scopes also include a full arbitrary waveform generator. Waveforms can be created or edited using the built-in AWG editor, imported from oscilloscope traces, or loaded from a spreadsheet.

Spectrum analyzer

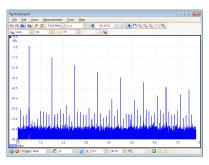

With the click of a button, you can display a spectrum plot of selected channels. The spectrum analyzer allows signals up to the full scope bandwidth to be viewed in the frequency domain. A full range of settings gives you control over the number of spectrum bands, window types and display modes: instantaneous, average, or peak-hold.

PicoScope allows you to display multiple spectrum views with different channel selections and zoom factors, and see these alongside time-domain waveforms of the same data. A comprehensive set of automatic frequency-domain measurements, including THD, THD+N, SNR, SINAD and IMD, can be added to the display.

Math channels

The PicoScope 2000 Series oscilloscopes offer a full range of math functions for processing and combining channels. The functions can also operate on reference waveforms.

Use the built-in list for simple functions such as addition and inversion, or open the equation editor and create complex




functions involving trigonometry, exponentials, logarithms, statistics, integrals and derivatives.

Measurements

• A								
• A	AC RMS	Whole trace	642 mV	640.8 mV	643.6 mV	641.6 mV	680.4 μV	20
• A	DC Average	Whole trace	-103 mV	-103 6 mV	-101.7 mV	-102.9 mV	503.6 uV	20

You can add any combination of automatic measurements to the display, chosen from a list of 26 scope and spectrum parameters. Every measurement includes statistics of minimum, maximum, average, standard deviation and sample size.


Advanced display modes

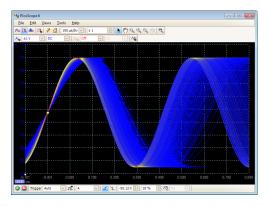

See old and new data superimposed, with new data in a brighter color or shade. This makes it easy to see glitches and dropouts and to estimate their relative frequency. Choose between analog persistence and digital color, or create a custom display mode.

The design of the PicoScope software ensures that maximum display area is available for waveform viewing. Even with a laptop you have a much bigger viewing area and higher resolution than a typical benchtop scope.

Serial decoding

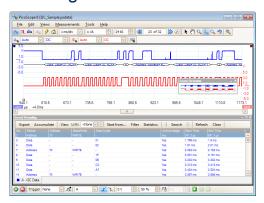

The PicoScope 2000 Series includes serial decoding capability as standard. Protocols currently included are I^2C , SPI, RS232/UART and CAN bus. Expect this list to grow as we release free software updates.

PicoScope displays the decoded data in the format of your choice: "in view", "in window", or both at once. The "in view" format shows the decoded data beneath the waveform on a common time axis, with error frames marked in red. You can zoom in on these frames to look for noise or distortion on the waveform.

"In window" format shows a list of the decoded frames, including the data and all flags and identifiers. You can set up filtering conditions to display only the frames you are interested in, search for frames with specified properties, or define a start pattern that the program will wait for before listing the data.

You can also create a spreadsheet to decode the hexadecimal data into arbitrary text strings.

High-speed data acquisition and digitizing


The drivers and software development kit supplied allow you to write your own software or interface to popular third-party software packages such as LabVIEW.

The driver supports data streaming, a mode that captures gap-free continuous data through the USB port directly to the PC's RAM or hard disk at a rate of 1 MS/s or more, so that you are not limited by the size of the device's buffer memory. Maximum speed is PC-dependent.

Mask limit testing

This feature is specially designed for production and debugging environments. Capture a signal from a known working system, and PicoScope will draw a mask around it with your specified tolerance. Connect the system under test, and PicoScope will highlight any parts of the waveform that fall outside the mask area. The highlighted details persist on the display, allowing the scope to catch intermittent glitches while you work on something else. The measurements window counts the number of failures, and can display other measurements and statistics at the same time.

The numerical and graphical mask editors can be used separately or in combination, allowing you to enter accurate mask specifications and modify existing masks. You can import and export masks as files.

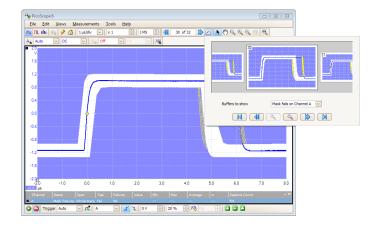

High-end features as standard

Buying a scope from some companies is a bit like buying a car. By the time you have added all the optional extras you need, the price has gone up considerably. With the PicoScope 2000 Series, high-end features such as resolution enhancement, mask limit testing, serial decoding, advanced triggering, automatic measurements, math channels and XY mode are all included in the price.

To protect your investment, both the PC software and firmware inside the unit can be updated. We have a long history of providing new features for free through software downloads. Other companies make vague promises about future enhancements but we deliver on our promises year after year. Users of our products reward us by becoming lifelong customers, frequently recommending us to their colleagues.

High signal integrity

Most oscilloscopes are built down to a price; ours are built up to a specification.

Careful front-end design and shielding reduces noise, crosstalk and harmonic distortion. Our 20 years of oscilloscope design experience can be seen in improved pulse response and bandwidth flatness.

We are proud of the dynamic performance of our products and publish these specifications in detail. The result is simple: when you probe a circuit, you can trust in the waveform you see on the screen.



PicoScope 2206 front-end screening

The PicoScope window

Oscilloscope controls: Commonly-used controls such as voltage range selection, timebase, memory depth and channel selection are placed on the toolbars for quick access, leaving the main display area clear for waveforms. More advanced controls and functions are located in the Tools menu.

Tools>Math channels: Combine input channels and reference waveforms using simple arithmetic, or create custom equations with trigonometric and other functions.

Tools>Serial decoding: Decode a serial data signal and display the data alongside the physical signal or as a detailed table.

Tools>Reference channels: Store waveforms in memory or on disk and display them alongside live inputs. Ideal for diagnostics and production testing.

Auto setup button: Configures the timebase and voltage ranges for stable display of your signals.


PicoScope: The display can be as simple or as complex as you need. Begin with a single view of one channel, and then expand the display to include any number of live channels, math channels and reference waveforms.

Waveform replay tool: PicoScope automatically records up to 10,000 of the most recent waveforms. You can quickly scan through to look for intermittent events.

Views: PicoScope is carefully designed to make the best use of the display area. You can add new scope and spectrum views, all of which are fully adjustable in size and shape.

Rulers: Each axis has two rulers that can be dragged onto the screen to make quick measurements of amplitude, time and frequency.

Zoom and pan tools: Use the conventional zoom buttons, or try the zoom overview window for fast navigation. No fiddly buttons and knobs: just use your mouse!

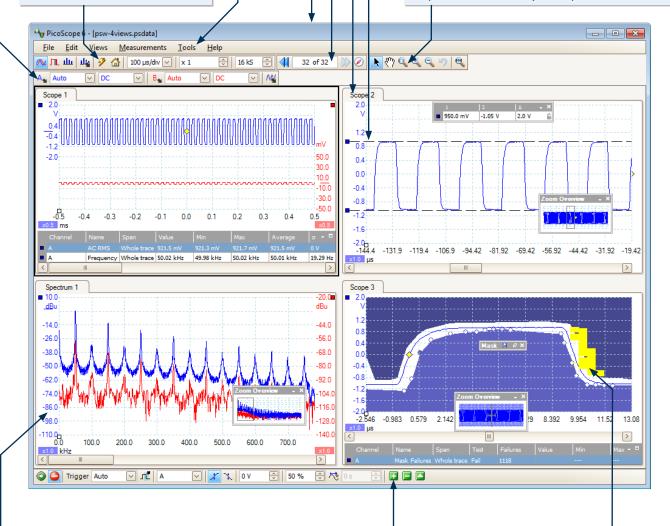

Movable axes: The vertical axes can be dragged up and down. This feature is particularly useful when one waveform is obscuring another. There's also a command to rearrange all the axes automatically.

Automatic measurements: Display calculated measurements for troubleshooting and analysis. You can add as many measurements as you need on each view. Each measurement includes statistical parameters showing its variability.

Mask limit testing:

Automatically generate a test mask from a waveform or draw one by hand. PicoScope highlights any parts of the waveform that fall outside the mask and shows error statistics.

PicoScope 2000 Series Oscilloscopes - Specifications

PRODUCT SELECTOR

MODEL	PicoScope 2204	PicoScope 2205	PicoScope 2206	PicoScope 2207	PicoScope 2208	
Bandwidth	10 MHz	25 MHz	50 MHz	100 MHz	200 MHz	
Sampling rate	100 MS/s	200 MS/s	500 MS/s	1 GS/s	1 GS/s	
Memory	8 kS	16 kS	24 kS	32 kS	40 kS	
Function generator + AWG	100 kHz	100 kHz	1 MHz	1 MHz	1 MHz	
EXT trigger	No	No	Yes	Yes	Yes	
DETAIL ED CRECIFICATION IS						

DETAILED SPECIFICATIONS

VERTICAL						
Number of channels 2						
Bandwidth (-3 dB)	10 MHz	25 MHz	50 MHz	100 MHz	200 MHz	
Rise time (calculated)	35 ns	14 ns	7 ns	3.5 ns	1.75 ns	
Resolution	ion 8 bits (12 bits with resolution enhancement)					
Input characteristics	BNC, 1 M Ω 20 pF BNC, 1 M Ω ±1% 13 pF ±1 pF					
Input coupling	AC/DC					
Input sensitivity	10 mV/div to 4 V/div (10 vertical divisions)					
Input ranges	±50 mV, ±100 mV, ±200 mV, ±500 mV, ±1 V, ±2 V, ±5 V, ±10 V, ±20 V					
Analog offset range (vertical position adjustment)	±250 mV (50 mV, 100 mV, 200 mV ranges) None ±2.5 V (500 mV, 1 V, 2 V ranges) ±20 V (5 V, 10 V, 20 V ranges)				anges)	
DC accuracy	±3% of full scale					
Overvoltage protection	±100 V (DC + AC peak)					

HORIZONTAL							
Max. sampling rate (real-time 1 ch.)	100 MS/s	200 MS/s	500 MS/s	1 GS/s	1 GS/s		
Max. sampling rate (real-time 2 ch.)	ax. sampling rate (real-time 2 ch.) 50 MS/s		250 MS/s	500 MS/s	500 MS/s		
Max. sampling rate (repetitive/ETS)	2 GS/s	4 GS/s	5 GS/s	10 GS/s	10 GS/s		
Max. sampling rate (streaming)	1 MS/s (typical) in PicoScope software. Rate using supplied SDK is PC-dependent.						
Timebase ranges	10 ns to 1000 s/div	5 ns to 1000 s/div	2 ns to 1000 s/div	1 ns to 1000 s/div	500 ps to 1000 s/div		
Buffer memory size (shared)	8 k samples	16 k samples	24 k samples	32 k samples	40 k samples		
Max. buffers (normal triggering)	x. buffers (normal triggering)			10,000			
Max. buffers (rapid block triggering)	N/A		32				
Timebase accuracy	±100 ppm		±50 ppm				
Sample jitter	unspecified		< 5 ps RMS				

DYNAMIC PERFORMANCE (typical)						
Crosstalk (full bandwidth)	Better than 200:1 (equal ranges) Better than 400:1 (equal ranges)					
Harmonic distortion < -50 dB at 100 kHz, full-scale input						
SFDR	> 52 dB at 100 kHz, full-scale input					
Noise	1 LSB (±1 V range)	< 180 µV RMS (±50 mV range)				
Pulse response	< 7% overshoot	< 5% overshoot				
Bandwidth flatness (at scope input)	(+0.3 dB, -3 dB) from DC to full bandwidth					

TRIGGERING					
Sources	Ch A, Ch B	Ch A, Ch B, Ext			
Modes	None, auto, repeat, single	None, auto, repeat, single, rapid (segmented memory)			
Advanced digital triggers (Ch A, B)	Rising, falling, dual, hysteresis, window, pulse	g, falling, dual, hysteresis, window, pulse width, window pulse width, window dropout, interval, logic, delayed			
Trigger types, ETS (Ch A, Ch B)	Edge				
Trigger sensitivity (Ch A, Ch B)	tivity (Ch A, Ch B) Digital triggering provides 1 LSB accuracy up to full bandwidth (ETS: typical 10 mV p-p at full				
Max. pre-trigger capture	100% of capture size				
Max. post-trigger delay	4 billion samples				
Trigger re-arm time	PC-dependent < 2 μs on fastest timebase				
Max. trigger rate	trigger rate PC-dependent Burst of 32 in 64 µs				

EXTERNAL TRIGGER INPUT						
Trigger types		Edge, pulse width, dropout, interval, logic				
Input characteristics		Front-panel BNC, 1 MΩ ±1% 13 pF ±1 pF				
Bandwidth		50 MHz 100 MHz 200 MHz ±5 V, DC coupled				
Threshold range	N/A					
Threshold accuracy		±3% of full scale				
Sensitivity		200 mV p-p typical, at full bandwidth				
Overvoltage protection		±100 V (DC + AC peak) up to 10 kHz				

Specifications continued...

PicoScope 2004						
None	FUNCTION GENERATOR	PicoScope 2204	PicoScope 2205	PicoScope 2206	PicoScope 2207	PicoScope 2208
Standard signal frequency	Standard output signals	Sine, square, triangle, D		OC voltage, ramp, sin(x)/x, Gaussian, half-sin	e
Sweep modes Up, down, dual with selectable starty stop frequences and increments Up down, frequency accuracy ±100 ppm	Pseudorandom output signals	None			White noise, PRBS	
0.100 ppm	Standard signal frequency	DC to	DC to 100 kHz		DC to 1 MHz	
Country trobugers presoration	Sweep modes		Up, down, dual with se	lectable start/stop fre	quencies and increment	ts
Cutput valuage range	Output frequency accuracy	±10	±100 ppm		±50 ppm	
Applicated filteress 4250 mV to a 2V amplicade, ±1 V offset Any amplitude filteress Any	Output frequency resolution			< 0.01 Hz		
Amplitude fatness (typical)	Output voltage range			±2 V		
SPECIAL PROPERTY STATE	Output adjustments	±250 mV to ±2 V a	amplitude, ±1 V offset	Any ampli	tude and offset within ±	£2 V range
SFDR STOR STORM ST	Amplitude flatness (typical)	< 1 dB t	o 100 kHz		< 0.5 dB to 1 MHz	
Output characteristics Overoritage protection ### 20 V ### 20 MS/s	DC accuracy			±1% of full scale		
Overvoltage protection ARBITRATY WAVEFORM GENERATOR Update rate 2 MS/s 8 th samples 8 k samples 8 k samples 8 k samples 8 bits 12 bits Bandwidth 100 kHz > 1 MHz Rise time (10%-90%) 5 PECTRUM ANALYZER Frequency range DC to 10 MHz DC to 25 MHz DC to 50 MHz DC to 100 MHz DC to 100 MHz DC to 200 MHz DC to 100 MHz DC to 200 MHz DC to 100 MHz DC to 100 MHz DC to 200 MHz DC to 30 MHz DC to 100 MHz DC to 200 MHz DC to 30 MHz DC to 30 MHz DC to 100 MHz DC to 200 MHz DC to 200 MHz DC to 30 MHz DC to 30 MHz DC to 200 MHz DC to 200 MHz A Bignitude, average, peak hold Windowing functions Rectangular, Gaussian, triangular, Blackman, Blackman-Harris, Hamming, Hann, flat-top Number of FFT points Selectable from 128 to haif available buffer memory in powers of 2 MATH CHANNELS +, -, *, /, sqrt, *, exp, in, log, abs, norm, sign, sin, cos, tan, asin, acos, atan, sinh, codh, tanh, derivative, integral, freq, min, max, average, peak A, B (input channels), T (inne), reference waveforms, constants, Pi ALTIONATIC MEASUREMENTS Oscilloscope AC RMS, true RMS, DC average, cycle time, frequency, duty cycle, falling rate, fall time, rising rate, site time, high pulse width, maximum, maximum, minimum, peak to peak frequency, stip peak, average amplitude at peak, total power, THD 9s, THD 8b, THD 8b, THD 9s, THD 8b, THD 8b, THD 9s, THD 8b, THD 8b, THD 9s, THD 9	SFDR	> 55 dB @ 1 kHz	z full-scale sine wave	> 60 dl	3 @ 10 kHz full-scale sir	ne wave
ARBITRARY WAVEFORM GENERATOR Update rate 2 MS/s 8 k samples 8 k k samples 8 bits 12 bits Bandwidth 100 kHz > 1 MHz Ret time (10% - 90%) SPECTRUM ANALYZER Frequency range DC to 10 MHz DC to 25 MHz DC to 50 MHz DC to 100 MHz DC to 200 MHz DD to 100 MHz DC to 100 MHz DC to 200 MHz DD to 100 MHz DC to 100 MHz DC to 200 MHz DD to 100 MHz DC to 100 MHz DC to 200 MHz DD to 100 MHz DC to 100 MHz DC to 200 MHz DC to 100 MHz DC to 100 MHz DC to 200 MHz Magnitude, average, peak hold Windowing functions Rectangular, Gaussian, triangular, Blackman-Harris, Hamming, Hann, flat-top Number of FFT points MATH CHANNELS #-,*,*, sqrt,*, exp. ln, log, abs, norm, sign, sin, cos, tan, sain, acos, atan, sinh, cosi, hanh, derivative, integral, freq. min, max, average, peak A, B (input channels), T (time), reference waveforms, constants, Pi AUTOMATIC MEASUREMENTS Oscilloscope AC RMS, true RMS, DC average, cycle time, frequency, duty cycle, falling rate, fall time, rising rate, rise time, high pulse width, low pulse width, maximum, minimum, peak to peak Frequency at peak, amplitude at peak, average amplitude at peak to peak Frequency at peak, amplitude at peak, average amplitude at peak to peak Frequency at peak, amplitude at peak, average amplitude at peak to peak Frequency at peak, amplitude at peak, average amplitude at peak to peak Frequency at peak, amplitude at peak, average amplitude at peak to peak Frequency at peak, amplitude at peak, average ampl	Output characteristics		Front pane	el BNC, 600 Ω output	impedance	
Update rate 2 MS/s 20 MS/s 8 kamples 12 bits 13 bits 14 bits 14 bits 15 bits 15 bits 15 bits 16	Overvoltage protection			± 10 V		
Update rate 2 MS/s 20 MS/s 8 kamples 12 bits 13 bits 14 bits 14 bits 15 bits 15 bits 15 bits 16	ARBITRARY WAVEFORM GENERATOR					
Buffer size		2 !	MS/s		20 MS/s	
Resolution Bandwidth Bandw	·		•		· · · · · · · · · · · · · · · · · · ·	
Rise time (10% - 90%) SPECTRUM ANALYZER Frequency range DC to 10 MHz DC to 25 MHz Magnitude, average, peak hold Windowing functions Number of FT points Rectangular, Gaussian, triangular, Blackman, Blackman-Harris, Hamming, Hann, flat-top Number of FT points Selectable from 128 to half available buffer memory in powers of 2 MATH CHANNELS Functions A, B (input channels), T (time), reference waveforms, constants, Pi AUTOMATIC MEASUREMENTS Oscilloscope A, B (input channels), T (time), reference waveforms, constants, Pi AUTOMATIC MEASUREMENTS Oscilloscope AC RMS, true RMS, DC average, cycle time, frequency, duty cycle, falling rate, fall time, rising rate, rise time, high pulse width, low pulse width, maximum, minimum, peak to peak frequency at peak, average amplitude at peak average			•			
Rise time (10% - 90%) SPECTRUM ANALYZER Frequency range DC to 10 MHz DC to 25 MHz DC to 50 MHz DC to 100 MHz DC to 200 MHz Display modes Magnitude, average, peak hold Windowing functions Rectangular, Gaussian, triangular, Blackmann-Blackmann-Harris, Hamming, Hann, flat-top Number of FFT points Selectable from 128 to half available buffer memory in powers of 2 MATH CHANNELS Functions \$\frac{+\tau_{-\tau_{-\text{*}}\text{*}}{\text{*}}\text{*}, \text{*}, *						
SPECTRUM ANALYZER Frequency range DC to 10 MHz DC to 25 MHz DC to 50 MHz DC to 100 MHz DD to 200 MHz DD to 100 MHz DD to 200 MHz						
DC to 10 MHz DC to 25 MHz DC to 50 MHz DC to 100 MHz DC to 200 MHz	,		Σ μο		100113	
Display modes Magnitude, average, peak hold Windowing functions Rectangular, Gaussian, triangular, Blackman, Blackman-Harris, Hamming, Hann, flat-top Number of FFT points Selectable from 128 to half available buffer memory in powers of 2 MATH CHANNELS Functions \$\frac{+, -, *, \}, sqrt, ^*, exp, in, log, abs, norm, sign, sin, cos, tan, asin, acos, atan, sinh, cosh, tanh, derivative, integral, freq, min, max, average, peak A, B (input channels), T (time), reference waveforms, constants, Pi AUTOMATIC MEASUREMENTS Oscilloscope ACRMS, true RMS, DC average, cycle time, frequency, duty cycle, falling rate, fall time, rising rate, rise time, high pulse width, low pulse width, maximum, minimum, peak to peak Frequency at peak, amplitude at peak, average and standard deviation SERIAL DECODING Protocols CAN Bus, PC, SPI, UART MASK LIMIT TESTING Statistics Pass/fail, failure count, total count DISPLAY Interpolation Protocols CAN Bus, PC, SPI, UART MASK LIMIT TESTING Statistics Pass/fail, failure count, total count DISPLAY Interpolation Digital color, analog intensity, custom, or none GENERAL USB 2.0 hi-speed (full-speed compatible) Power requirements Diwer requirements Diwer requirements Power from USB port Dimensions (including connectors) 150 x 100 x 40 mm 200 x 140						
Windowing functions Number of FFT points Selectable from 128 to half available buffer memory in powers of 2 MATH CHANNELS **, /, sqrt, ^, exp, in, log, abs, norm, sign, sin, cos, tan, asin, acos, atan, sinh, cosh, tanh, derivative, integral, freq, min, max, average, peak A, B (input channels), T (time), reference waveforms, constants, Pi AUTOMATIC MEASUREMENTS Oscilloscope AC RMS, true RMS, DC average, cycle time, frequency, duty cycle, falling rate, fall time, rising rate, rise time, high pulse width, low pulse width, maximum, minimum, peak to peak Frequency at peak, amplitude at peak, average amplitude at peak, stotal power, THD %, THD Bt, THD plus noise, SFDR, SINAD, SNR, IMD SERIAL DECODING Protocols SERIAL DECODING Protocols CAN Bus, PC, SPI, UART MASK LIMIT TESTING Statistics Pass/fail, failure count, total count DISPLAY Interpolation Linear or sin(x)/x Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity Diversions (including connectors) Weight CO, 22 kg (7.8 oz) Operating: 0 °C to 50 °C (20 °C to 30 °C for stated accuracy). Storage: -20 °C to +60 °C. Diversions (including connectors) Temperature range Operating: 0 °C to 50 °C (20 °C to 30 °C for stated accuracy). Storage: -20 °C to +60 °C. Designed to EN 6110-1:2010 EMG approvals Finvironmental approvals Finvironmental approvals Finvironmental approvals Finvironmental approvals Finvironmental policy (II cellab) Chinese (Simplified), Chinese (French, German, Italian, Spanish, Dutch, Finnish, Greek,		DC to 10 MHz				DC to 200 MHz
Number of FFT points Selectable from 128 to half available buffer memory in powers of 2 MATH CHANNELS Functions **, -, *, /, sqrt, ^, exp, In, log, abs, norm, sign, sin, cos, tan, asin, acos, atan, sinh, cosh, tanh, derivative, integral, freq, min, max, average, peak A, B (input channels), T (time), reference waveforms, constants, Pi AUTOMATIC MEASUREMENTS Oscilloscope AC RMS, true RMS, DC average, cycle time, frequency, duty cycle, falling rate, fall time, rising rate, rise time, high pulse width, low pulse width, maximum, minimum, peak to peak Frequency at peak, applitude at peak, average amplitude at peak, serage	· '					
MATH CHANNELS Functions ##, -, **, /, sqrt, ^, exp, in, log, abs, norm, sign, sin, cos, tan, asin, acos, atan, sinh, cosh, tanh, derivative, integral, freq, min, max, average, peak A, B (input channels), T (time), reference waveforms, constants, Pi AUTOMATIC MEASUREMENTS Oscilloscope AC RMS, true RMS, DC average, cycle time, frequency, duty cycle, falling rate, fall time, rising rate, rise time, high pulse width, low pulse width, maximum, minimum, peak to peak Frequency at peak, amplitude at peak, average amplitude at peak, severage amplitude at peak, s		· · · · · · · · · · · · · · · · · · ·				
Functions +, -, *, /, sqrt, ^, exp, in, log, abs, norm, sign, sin, cos, tan, asin, acos, atan, sinh, cosh, tanh, derivative, integral, freq. min, max, average, peak A, B (input channels), T (time), reference waveforms, constants, P! AUTOMATIC MEASUREMENTS	Number of FFT points Selectable from 128 to half available buffer memory in powers of 2					
Sinh, cosh, tanh, derivative, integral, freq, min, max, average, peak A, B (input channels), T (time), reference waveforms, constants, Pi AUTOMATIC MEASUREMENTS Oscilloscope AC RMS, true RMS, DC average, cycle time, frequency, duty cycle, falling rate, fall time, rising rate, rise time, high pulse width, low pulse width, maximum, minimum, peak to peak Frequency at peak, amplitude at peak, average amplitude at peak at peak average, average	MATH CHANNELS					
sinh, cosh, tanh, derivative, integral, freq, min, max, verage, peak A, B (input channels), T (time), reference waveforms, constants, PI AUTOMATIC MEASUREMENTS Oscilloscope AC RMS, true RMS, DC average, cycle time, frequency, duty cycle, falling rate, fall time, rising rate, rise time, high pulse width, low pulse width, maximum, minimum, peak to peak Frequency at peak, amplitude at peak, average amplitude at peak, total power, THD %, THD dB, THD plus noise, SFDR, SINAD, SNR, IMD Statistics Frequency at peak, amplitude at peak, average amplitude at peak, total power, THD %, THD dB, THD plus noise, SFDR, SINAD, SNR, IMD Minimum, maximum, average and standard deviation SERIAL DECODING Protocols CAN Bus, PC, SPI, UART MASK LIMIT TESTING Statistics Pass/fall, failure count, total count DISPLAY Interpolation Linear or sin(x)/x Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity Power requirements Powered from USB port Dimensions (including connectors) 150 x 100 x 40 mm 200 x 140 x 40 mm 200 x 150 x 100 x 40 mm 200 x 140 x 40 mm 200 x 150 x 100 x 40 mm 200	Functions	+, -				atan,
AUTOMATIC MEASUREMENTS Oscilloscope AC RMS, true RMS, DC average, cycle time, frequency, duty cycle, falling rate, fall time, rising rate, rise time, high pulse width, low pulse width, low pulse width, now much peak to peak Frequency at peak, amplitude at peak, average amplitude at peak, serrage and standard deviation SERIAL DECODING Protocols CAN Bus, PC, SPI, UART MASK LIMIT TESTING Statistics Pass/fall, failure count, total count DISPLAY Interpolation Linear or sin(x)/x Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity Power requirements Powered from USB port Dimensions (including connectors) 150 x 100 x 40 mm 200 x 140 x 40 mm						
AC RMS, true RMS, DC average, cycle time, frequency, duty cycle, fall time, rising rate, rise time, high pulse width, low pulse width maximum, minimum, peak to peak Frequency at peak, amplitude at peak, serage amplitude at peak, total power, THD %, THD dB, THD plus noise, SFDR, SINAD, SNR, IMD Statistics SERIAL DECODING Protocols CAN Bus, PC, SPI, UART MASK LIMIT TESTING Statistics Pass/fail, failure count, total count DISPLAY Interpolation Linear or sin(x)/x Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity USB 2.0 hi-speed (full-speed compatible) Power requirements Powered from USB port Dimensions (including connectors) Meight COD x 140 x 40 mm 200 x 140 x 40 mm 20	Operands A, B (input channels), T (time), reference waveforms, constants, Pi					
rising rate, rise time, high pulse width, low pulse width, maximum, minimum, peak to peak Frequency at peak, amplitude at peak, average amplitude at peak, total power, THD %, THD dB, THD plus noise, SFDR, SINAD, SNR, IMD Statistics SERIAL DECODING Protocols CAN Bus, I²C, SPI, UART MASK LIMIT TESTING Statistics Pass/fail, failure count, total count DISPLAY Interpolation Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity USB 2.0 hi-speed (full-speed compatible) Power requirements Powered from USB port Dimensions (including connectors) Weight O2.2 kg (7.8 oz) Operating: 0°C to 50 °C (20 °C to 30 °C for stated accuracy), Storage: -20 °C to +60 °C. Humidity range Operating: 5% to 80% RH non-condensing. Storage: 5% to 95% RH non-condensing. Safety approvals Designed to EN 61010-1:2001 EMC approvals Tested to EN61326-1:2006 and FCO Part 15 Subpart B Environmental approvals Software included PicoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,	AUTOMATIC MEASUREMENTS					
Frequency at peak, amplitude at peak, werage amplitude at peak, total power, THD %, THD dB, THD plus noise, SFDR, SINAD, SNR, IMD Statistics SERIAL DECODING Protocols CAN Bus, PC, SPI, UART MASK LIMIT TESTING Statistics Pass/fail, failure count, total count DISPLAY Interpolation Linear or sin(x)/x Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity USB 2.0 hi-speed (full-speed compatible) Power requirements Dimensions (including connectors) 150 x 100 x 40 mm 200 x 140 x 40 mm Weight A0.22 kg (7.8 oz) Operating: 0 °C to 50 °C (20 °C to 30 °C for stated accuracy). Storage: -20 °C to +60 °C. Humidity range Operating: 5% to 80% RH non-condensing. Storage: 5% to 95% RH non-condensing. Safety approvals Designed to EN 61010-1:2001 EMC approvals Foliance of the programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Microsoft Windows XP, Vista or Windows 7, 32 or 64-bit Languages (Ul and manual): Languages (Ul and manual): Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,	Oscilloscope					
total power, THD %, THD dB, THD plus noise, SFDR, SINAD, SNR, IMD Statistics Minimum, maximum, average and standard deviation SERIAL DECODING Protocols CAN Bus, IPC, SPI, UART MASK LIMIT TESTING Statistics Pass/fail, failure count, total count DISPLAY Interpolation Linear or sin(x)/x Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity Power requirements Dimensions (including connectors) 150 x 100 x 40 mm 200 x 140 x 40 mm 40.22 kg (7.8 oz) Poperature range Operating: 0 °C to 50 °C (20 °C to 30 °C for stated accuracy). Storage: -20 °C to +60 °C. Humidity range Safety approvals Designed to EN 61010-1:2001 EMC approvals Environmental approvals Environmental approvals ROHS and WEEE compliant Microsoft Windows XP, Vista or Windows 7, 32 or 64-bit Accessories Languages (Ul and manual): Languages (Ul and manual): Chinese (Simplified), Chinese (Fraditional), Czech, Danish, Dutch, Finnish, Greek,	·	rising rate,				eak to peak
SERIAL DECODING Protocols CAN Bus, I ² C, SPI, UART MASK LIMIT TESTING Statistics Pass/fail, failure count, total count DISPLAY Interpolation Prowered from USB port Dimensions (including connectors) Weight Connectivity Power requirements Powerating of Cto 50 °C (20 °C to 30 °C for stated accuracy). Storage: -20 °C to +60 °C. Humidity range Safety approvals EmC approvals EmC approvals EmC approvals EnC Software included PicoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Picos Software included Picos Software (Ill poly): Chinese (Simplified), Chinese (Fraditional), Czech, Danish, Dutch, Finnish, Greek,	Spectrum	to				MD
Protocols CAN Bus, I²C, SPI, UART MASK LIMIT TESTING Statistics Pass/fail, failure count, total count DISPLAY Interpolation Linear or sin(x)/x Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity Dower requirements Powered from USB port Dimensions (including connectors) Dimensions (including connectors) 150 x 100 x 40 mm 200 x 140 x 40 mm Weight 2.0.5 kg (17.7 oz.) Temperature range Operating: 0°C to 50°C (20°C to 30°C for stated accuracy). Storage: -20°C to +60°C. Humidity range Operating: 5% to 80% RH non-condensing. Storage: 5% to 95% RH non-condensing. Safety approvals Designed to EN 61010-1:2001 EMC approvals Tested to EN61326-1:2006 and FCC Part 15 Subpart B Environmental approvals RoHS and WEEE compliant Software included PicoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Accessories USB cable Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,	Statistics		•	•		
Protocols CAN Bus, I²C, SPI, UART MASK LIMIT TESTING Statistics Pass/fail, failure count, total count DISPLAY Interpolation Linear or sin(x)/x Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity Dower requirements Powered from USB port Dimensions (including connectors) Dimensions (including connectors) 150 x 100 x 40 mm 200 x 140 x 40 mm Weight 2.0.5 kg (17.7 oz.) Temperature range Operating: 0°C to 50°C (20°C to 30°C for stated accuracy). Storage: -20°C to +60°C. Humidity range Operating: 5% to 80% RH non-condensing. Storage: 5% to 95% RH non-condensing. Safety approvals Designed to EN 61010-1:2001 EMC approvals Tested to EN61326-1:2006 and FCC Part 15 Subpart B Environmental approvals RoHS and WEEE compliant Software included PicoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Accessories USB cable Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,	SERIAL DECODING					
MASK LIMIT TESTING Statistics Pass/fail, failure count, total count DISPLAY Interpolation Linear or sin(x)/x Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity Dimensions (including connectors) Dimensions (including connectors) Dimensions (including connectors) Veight Concertive and Concertication and Concertive and Concertive and Concertication and Concertication and Conc				CANI Due 12C CDI LIAI	DT	
Statistics Pass/fail, failure count, total count DISPLAY Interpolation Linear or sin(x)/x Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity Power requirements Dimensions (including connectors) Veight Color to 50 °C (20 °C to 30 °C for stated accuracy). Storage: -20 °C to +60 °C. Humidity range Operating: 0 °C to 50 °C (20 °C to 30 °C for stated accuracy). Storage: -20 °C to +60 °C. Humidity range Operating: 5% to 80% RH non-condensing. Storage: 5% to 95% RH non-condensing. Designed to EN 61010-1:2001 Designed to EN 61010-1:2010 EMC approvals Tested to EN61326-1:2006 and FCC Part 15 Subpart B Environmental approvals PicoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Accessories Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,	Trotocois			AN bus, I-C, 31 I, OAI	XI	
DISPLAY Interpolation Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity Power requirements Dimensions (including connectors) Dimensions (including connectors) Dimensions (including connectors) Veight Vo.22 kg (7.8 oz) Temperature range Operating: 0 °C to 50 °C (20 °C to 30 °C for stated accuracy). Storage: -20 °C to +60 °C. Humidity range Operating: 5% to 80% RH non-condensing. Storage: 5% to 95% RH non-condensing. Designed to EN 61010-1:2001 EMC approvals Environmental approvals Designed to EN 61010-1:2001 EMC approvals PricoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Accessories USB cable Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,	MASK LIMIT TESTING					
Interpolation Linear or sin(x)/x Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity Dimensions (including connectors) Dimensions (including connectors) Dimensions (including connectors) 150 x 100 x 40 mm 200 x 140 x 40 mm 200 x	Statistics		Pass/	fail, failure count, tota	count	
Interpolation Linear or sin(x)/x Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity Dimensions (including connectors) Dimensions (including connectors) Dimensions (including connectors) 150 x 100 x 40 mm 200 x 140 x 40 mm 200 x	DISPLAY					
Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity Dimensions (including connectors) Dimensions (including connectors) 150 × 100 × 40 mm 200 × 140 × 10 mm				Linear or sin(x)/x		
GENERAL PC connectivity Power requirements Powered from USB port Dimensions (including connectors) 150 x 100 x 40 mm 200 x 140 x 40 mm Weight Co.22 kg (7.8 oz) Coperating: 0 °C to 50 °C (20 °C to 30 °C for stated accuracy). Storage: -20 °C to +60 °C. Humidity range Operating: 5% to 80% RH non-condensing. Storage: 5% to 95% RH non-condensing. Safety approvals Designed to EN 61010-1:2001 Designed to EN 61010-1:2010 EMC approvals Tested to EN61326-1:2006 and FCC Part 15 Subpart B Environmental approvals ROHS and WEEE compliant Software included PicoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Accessories Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,						
PC connectivity Power requirements Powered from USB port Dimensions (including connectors) 150 x 100 x 40 mm 200 x 140 x 40 mm 200 x 140 x 40 mm 200 x 170 oz.) Temperature range Operating: 0 °C to 50 °C (20 °C to 30 °C for stated accuracy). Storage: -20 °C to +60 °C. Humidity range Operating: 5% to 80% RH non-condensing. Storage: 5% to 95% RH non-condensing. Safety approvals Designed to EN 61010-1:2001 EMC approvals Tested to EN61326-1:2006 and FCC Part 15 Subpart B Environmental approvals RoHS and WEEE compliant Software included PicoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Accessories USB cable Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,	CENEDAL					
Power requirements Dimensions (including connectors) 150 x 100 x 40 mm 200 x 140 x 10 x 10 mm 200 x 10 x 10 x 10 mm 200 x 140 x 10 x 10 mm 200 x 10 x 10 x 10 m			LICE 2.0	h: d /£.ll d		
Dimensions (including connectors) 150 x 100 x 40 mm 200 x 140 x 40 mm 40.22 kg (7.8 oz) Consider the second state of the s	,					
Weight < 0.22 kg (7.8 oz) < 0.5 kg (17.7 oz.) Temperature range Operating: 0 °C to 50 °C (20 °C to 30 °C for stated accuracy). Storage: -20 °C to +60 °C. Humidity range Operating: 5% to 80% RH non-condensing. Storage: 5% to 95% RH non-condensing. Safety approvals Designed to EN 61010-1:2001 Designed to EN 61010-1:2010 EMC approvals Tested to EN61326-1:2006 and FCC Part 15 Subpart B Environmental approvals RoHS and WEEE compliant Software included PicoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Microsoft Windows XP, Vista or Windows 7, 32 or 64-bit USB cable Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,	•	450 40		owered from USB po		
Temperature range Operating: 0 °C to 50 °C (20 °C to 30 °C for stated accuracy). Storage: -20 °C to +60 °C. Humidity range Operating: 5% to 80% RH non-condensing. Storage: 5% to 95% RH non-condensing. Designed to EN 61010-1:2001 Designed to EN 61010-1:2010 EMC approvals Tested to EN61326-1:2006 and FCC Part 15 Subpart B Environmental approvals RoHS and WEEE compliant Software included PicoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Microsoft Windows XP, Vista or Windows 7, 32 or 64-bit Accessories USB cable Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,						
Humidity range Operating: 5% to 80% RH non-condensing. Storage: 5% to 95% RH non-condensing. Designed to EN 61010-1:2001 EMC approvals Tested to EN61326-1:2006 and FCC Part 15 Subpart B Environmental approvals RoHS and WEEE compliant Software included PicoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Accessories USB cable Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,			• ,	20.00 5	. ,	C 4- 140 0C
Safety approvals Designed to EN 61010-1:2001 Designed to EN 61010-1:2010 EMC approvals Tested to EN61326-1:2006 and FCC Part 15 Subpart B Environmental approvals RoHS and WEEE compliant Software included PicoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Microsoft Windows XP, Vista or Windows 7, 32 or 64-bit Accessories USB cable Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,						
EMC approvals Environmental approvals RoHS and WEEE compliant Software included PicoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Microsoft Windows XP, Vista or Windows 7, 32 or 64-bit Accessories USB cable Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,	, ,				•	
Environmental approvals RoHS and WEEE compliant Software included PicoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Microsoft Windows XP, Vista or Windows 7, 32 or 64-bit Accessories USB cable Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,	,	· ·			010	
Software included PicoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Microsoft Windows XP, Vista or Windows 7, 32 or 64-bit USB cable Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,						
PC requirements Microsoft Windows XP, Vista or Windows 7, 32 or 64-bit USB cable Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,		·				VIENAL D. L.L.S.
Accessories USB cable Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,		PicoScope 6,	·			vicvv, Delphi)
Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,			Microsoft Window		ows /, 32 or 64-bit	
Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,			F 1:1		- Cnanial-	
	Languages (OI and manual):	· · · · · · · · · · · · · · · · · · ·				Greek
	Languages (UI only):					



PicoScope 2204
PicoScope 2205



PicoScope 2206
PicoScope 2207
PicoScope 2208

AWG and function generator



Pack Contents

- PicoScope 2000 Series oscilloscope
- USB cable
- Quick Start Guide
- Software and Reference CD

Matching Probes Available

If you don't already have suitable probes, order a set from us. A durable storage pouch is included.



Optional Case

Fitted with foam padding for your scope. A compartment in the lid holds probes and other accessories.



Hand-held Oscilloscopes



Also available in the PicoScope 2000 Series, the PicoScope 2104 and 2105 single-channel handheld oscilloscopes are the ultimate in compact design. See our website for details.

Ordering Information

ORDER CODE	DESCRIPTION	GBP	USD*	EUR*
PP419	PicoScope 2204 10 MHz oscilloscope	159	265	195
PP420	PicoScope 2205 25 MHz oscilloscope	249	415	305
PP800	PicoScope 2206 50 MHz oscilloscope	349	575	425
PP801	PicoScope 2207 100 MHz oscilloscope	449	745	545
PP802	PicoScope 2208 200 MHz oscilloscope	599	995	725
PP787	2 x 60 MHz probes for PicoScope 2204, 2205 and 2206	30	50	36
PP821	2 x 150 MHz probes for PicoScope 2207	40	66	48
PP822	2 x 250 MHz probes for PicoScope 2208	50	83	60
MI136	Carrying case	30	50	36



Pico Technology, James House, Colmworth Business Park, St. Neots, Cambridgeshire, PE19 8YP, United Kingdom T:+44 (0) 1480 396 395 F: +44 (0) 1480 396 296 E: sales@picotech.com



